

BB2 COFFEE CUP



THANK YOU FOR PURCHASING THE BB2 COFFEE CUP HIDDEN CAMERA

Please read this manual before operating the hidden camera and keep it handy.


This Travel Coffee Cup looks exactly like any other coffee thermos, but it also contains a built in camera. Travel mugs are so common these days that nobody pays any attention to them. They also have the added benefit of being permitted pretty much everywhere. Place it on a desk to record a meeting and no one will know it is not a normal cup of coffee.

- Motion detection
- Looks just like a normal travel coffee mug

Your purchase should include:

- 1 x BB2 Coffee Cup Hidden Camera
- 1 x Remote Control
- 1 x USB Cable
- 1 x AC Adaptor
- 1 x User Manual

GET FAMILIAR WITH YOUR BB2 COFFEE CUP HIDDEN CAMERA

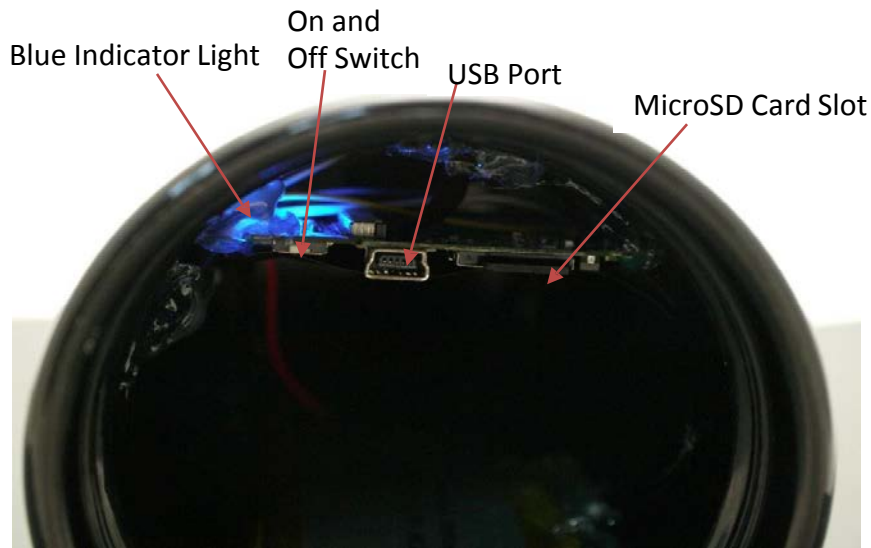

OPERATING THE CAMERA

IMPORTANT NOTICE: Allow the device to charge 4 – 6 hours before using.

HOW TO TURN ON THE CAMERA

1. Make sure that the “On and Off Switch” is all the way to the right in the on position.
2. Point the remote control towards the inside of the coffee cup and press the “Power button.” (The **Blue Indicator Light** will turn on)
3. The camera is now in Standby Mode

HOW TO TURN OFF THE CAMERA

1. Press the “Power Button” on the remote control. (The **Blue Indicator Light** will turn off)
2. Leave the “On and Off Switch” on, unless you are storing the device unused for an extended period of time.
3. The camera is now off.

HOW TO RECORD VIDEO

1. When the camera is in Standby Mode press the “Video Button.” (The **Blue Indicator Light** will flash three times)
2. Once the **Blue Indicator Light** turns off the camera is now recording video.

HOW TO STOP RECORDING VIDEO

1. While the camera is recording video press the “Video Button.” (The **Blue Indicator Light** will turn on)
2. The camera has now stopped recording and is now in Standby Mode.

HOW TO TAKE PICTURES

1. When the camera is in Standby Mode press the “Photo Button.” (The **Blue Indicator Light** will flash once)
2. Once the blue indicator light flashes the picture has been taken.

HOW TO RECORD MOTION DETECTION

1. When the camera is in Standby Mode press the “Motion Detection Button.” (The **Blue Indicator Light** will flash several times then turn off)
2. Once the blue indicator light is done flashing, the camera is now recording motion detection.

HOW TO STOP RECORDING MOTION DETECTION

1. While the camera is recording motion detection press the “Motion Detection Button.” (The **Blue Indicator Light** will turn on)
2. The camera has stopped recording motion detection and is now in Standby Mode.


RETRIEVE THE FILES TO YOUR PC

1. Plug the device into your PC using the USB cable
2. Locate “Removable Disk” inside the (My) Computer folder
 - AutoPlay Removable Disk > Open folder to view files



Or...

- Go to Start > Computer > Removable Disk

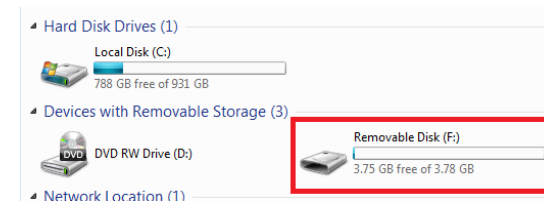

3. Open the Removable Disk drive
4. Open the [folder name] folder
5. Double click the file you want to view
 - VLC Player is recommended for watching videos

TROUBLESHOOTING

THE DEVICE WILL NOT TURN ON

- Charge the device for at least 4 hours before the first use
- Make sure the charging cable is securely inserted into the device and into the power source

THE DEVICE IS NOT CHARGING

- Replace the battery or charging cable
- If you are charging via a wall power source, you may need to charge via your PC. The AC adapter may not work

THE DEVICE HAS CRASHED

- You need to reset the device

MY COMPUTER DOESN'T RECOGNIZE THE DEVICE

- Unplug the device from your PC and reboot the device
- Unplug the device from your PC and reboot your PC
- Try using a different USB slot on your PC
- Replace the USB cable

THE SOUND OR VIDEO IS UNCLEAR

- The device needs charging

OTHER PROBLEMS

- Call our technical support at **770-694-6923**

SPECIFICATIONS

Video Resolution	1280 x 960
Video Format	.AVI
Frames per Second	Up to 30 fps
Recording Time	Up to 10 or 30 hours
Vision Angle	72 degrees
Motion Detection	6 meters for straight-line distance
Photo Resolution	
Photo Format	.JPG
Audio Quality	
Audio Format	.MP3
Water Resistant	
Battery Life	Up to 30 hours
Type of Memory	Micro SD Card
Memory Capacity	Up to 64 GB
Recording Capacity	2GB ≈ 1 hour 4GB ≈ 2 hours 8GB ≈ 4 hours 16GB ≈ 8 hours 32GB ≈ 16 hours
USB Interface	2.0 USB
Player Software	VLC recommended
Operating Systems	Windows 2000 Windows Me Windows XP Windows Vista Windows 7 Windows 8 Mac OSX Linux