

HIGH DEFINITION SUNGLASSES



THANK YOU FOR PURCHASING THE HIGH DEFINITION SUNGLASSES

Please read this manual before operating the high definition sunglasses and keep it handy.

 
 
Covert gadgets don't always have to be used for spying. The high quality metal front frames and soft-touch plastic not only make these glasses sturdy, but comfortable as well. Between assignments you can use this ultra-advanced pair of glasses just to give yourself that trendy intelligent look.

These specs are ready to go to work and capture everything you see. Because this device uses MicroSD cards, you'll never need to work about running out of memory because you can replace them as needed. Transfer files to and from your computer easily with the included USB cable.

Your purchase should include:

- 1 x High Definition Sunglasses
- 1 x USB Cable
- 1 x Black Carrying Pouch
- 1 x Glass Cleaning Cloth
- 1 x Instruction Booklet

GET FAMILIAR WITH YOUR HIGH DEFINITION SUNGLASSES

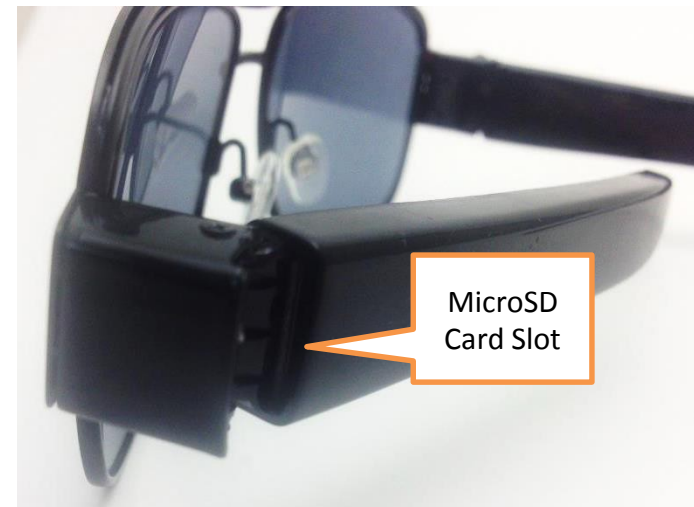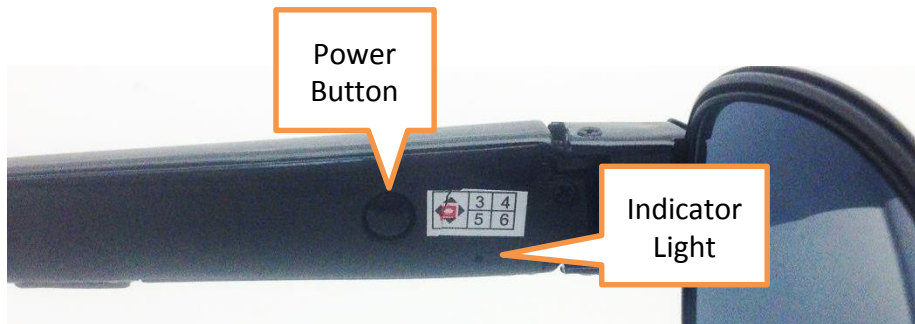

OPERATING THE HIGH DEFINITION SUNGLASSES

IMPORTANT NOTICE: Allow the device to charge 8 – 12 hours before using. Do NOT charge for more than 12 hours.

HOW TO CHARGE THE SUNGLASSES

1. Plug the USB cable into the USB port on the sunglasses
2. Plug the USB cable into the USB port on your PC
 - While charging, the red indicator light is on
 - When fully charged, the blue indicator light is on

HOW TO TURN ON THE SUNGLASSES

1. Push and hold the Power Button for 2 seconds
 - The blue indicator light will turn on
 - The sunglasses are now in **standby mode**
 - If you do not use the sunglasses for one minute, the sunglasses will automatically shut off

HOW TO RECORD VIDEO

 
1. Put the sunglasses into **standby mode**
2. Push and hold the Power Button for 3 seconds
 - The blue indicator light will blink 3 times and then turn off
 - The sunglasses are now recording live video
3. Push the Power Button
 - The red indicator light will blink 3 times
 - The sunglasses have now shut down

HOW TO TAKE A PHOTOGRAPH


1. Put the sunglasses into **standby mode**
2. Push the Power Button
 - The blue indicator light will blink once
 - The sunglasses have taken a photograph

HOW TO RESET THE TIME AND DATE STAMP


1. Plug the device into your PC using the USB cable
2. Turn on the device
3. Locate “Removable Disk” inside the (My) Computer folder
 - Go to Start > Computer > Removable Disk

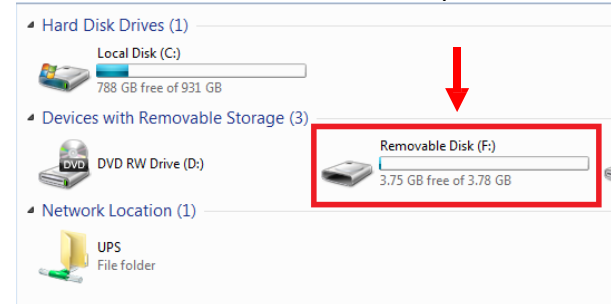

 4. Open the Removable Disk drive
5. Right click with your mouse
6. Scroll down to “New”
7. Click “Text Document”
8. **Rename “New Text Document” as “time”**
The title must be in all lowercase letters!

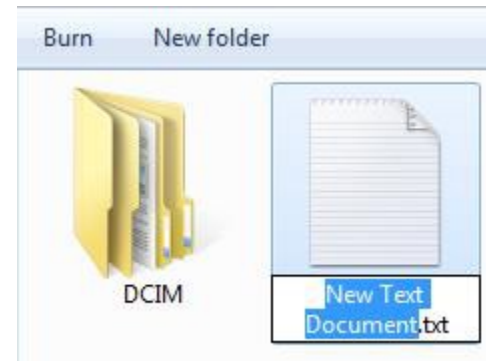

Before Step 8

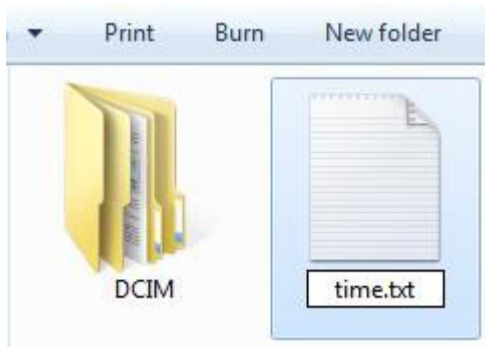 

After Step 8

9. Open the text document
10. Enter the current date in Year-Month-Day format
11. Enter the current time in following format (without quotes)
"2014.08.13 15:15:00 Y"
12. If you do not want the time on the video, change the "Y" to "N"
13. Save the text document

Unplug the device from your PC

 
RETRIEVE THE FILES TO YOUR PC

1. Plug the device into your PC using the USB cable
2. Locate "Removable Disk" inside the (My) Computer folder
 - AutoPlay Removable Disk > Open folder to view files



Or...

- Go to Start > Computer > Removable Disk

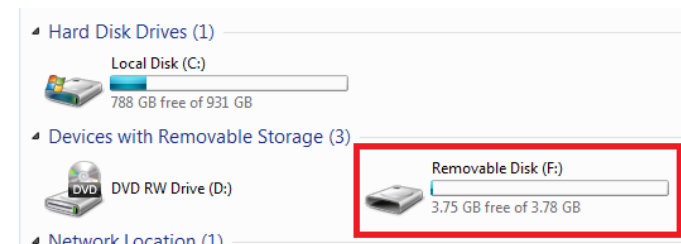

3. Open the Removable Disk drive
4. Open the IMAGE folder to view your photos
5. Open the VIDEO folder
6. Open the 100VIDEO folder to view your videos
7. Double click the file you want to view
 - VLC Player is recommended for watching videos

TROUBLESHOOTING

THE DEVICE WON'T TURN ON

- Charge the device for at least 4 hours before the first use
- Make sure the charging cable is securely inserted into the device and into the power source

THE DEVICE ISN'T CHARGING

- Replace the battery or charging cable
- If you are charging via a wall power source, you may need to charge via your PC. The AC adapter might be bad

THE DEVICE HAS CRASHED

- You need to reset the device

MY COMPUTER DOESN'T RECOGNIZE THE DEVICE

- Unplug the device from your PC and reboot the device
- Unplug the device from your PC and reboot your PC
- Try using a different USB slot on your PC
- Replace the USB cable

THE RED AND BLUE INDICATOR LIGHT ALTERNATE FLASHING WHEN I TURN ON THE SUNGLASSES

- There is no MicroSD card in the slot

THE RED AND BLUE INDICATOR LIGHT ALTERNATE FLASHING EVEN WITH A MICROSD CARD IN THE SLOT

- The MicroSD card is full
 - Cut and paste files from the card into your PC
 - Insert a new MicroSD card

THE RED AND BLUE INDICATOR LIGHT ALTERNATE FLASHING 3 TIMES AND THEN SHUT OFF

- The device needs charging

THE SOUND OR VIDEO IS UNCLEAR

- The device needs charging

OTHER PROBLEMS

- Call our technical support at **770-694-6921**

SPECIFICATIONS

| | |
|---------------------------|---|
| Video Resolution | 1280*720 |
| Video Format | AVI |
| Frames per Second | 30 |
| Recording Time | 1.5 hours |
| Motion Detection | No |
| Photo Resolution | 1280*720 |
| Photo Format | JPEG |
| Water Resistant | No |
| Battery Life | Up to 1.5 hours |
| Type of Memory | MicroSD Card |
| Memory Capacity | 32GB |
| Recording Capacity | 2GB ≈ 1 hour 4GB ≈ 2 hours 8GB ≈ 4 hours 16GB ≈ 8 hours 32GB ≈ 16 hours |
| USB Interface | 2.0 USB |
| Player Software | VLC recommended |
| Operating Systems | Windows Mac OSX Linux |