

VIDEO AND VOICE RECORDER WITH WIRELESS CHARGING



THANK YOU FOR PURCHASING THE VIDEO AND VOICE RECORDER WITH WIRELESS CHARGING

Please read this manual before operating the Video and Voice Recorder with Wireless Charging and keep it handy.

The HCMP4HD is a compact device capable of holding up to 138 hours of audio recordings on its internal 8GB of storage or up to a massive 546 hours with a 32GB MicroSD card. Not only does this device has its own internal storage, but it also has the option to take up to an additional 32GB via its MicroSD slot. The sleek and modern design fits in almost anywhere. It features a camera capable of recording clear 720p video as well as a full touchscreen front for easy control of all aspects of the device! The unit charges easily with the included USB cable either directly from your PC, wall AC adapter, or the included wireless charging mat for easy charging. No need to fiddle with plugging and unplugging cables, just lay it down on the mat and it automatically start charging! Plenty of storage capacity for everyday use. Connect to the PC for simple plug-and-play recovery of your audio and video recordings.

Your purchase should include:

- 1 x Video and Voice Recorder with Wireless Charging
- 1 x Micro USB Cable
- 1 x Wall Adapter
- 1 x Wireless Charging Mat
- 1 x Set of Earphone
- 1 x Instruction Booklet

GET FAMILIAR WITH YOUR VIDEO AND VOICE RECORDER
WITH WIRELESS CHARGING



OPERATING THE VIDEO AND VOICE RECORDER WITH WIRELESS CHARGING

HOW TO CHARGE THE DEVICE

Charging via Your Computer

1. Connect the wireless charging pad to your computer using the included USB cable
 - The red indicator light on the charging pad will turn on
2. Place the recorder on the charging pad as shown below



- The red indicator light on the device will blink while charging and the screen will show a green battery with a red lightning bolt

HELPFUL TIP: Charging takes 5 hours using this method

Charging via Household Outlet

1. Plug the included AC adapter into a household outlet
2. Connect the wireless charging pad to the AC adapter using the included USB cable
 - The red indicator light on the charging pad will turn on
3. Place the recorder on the charging pad as shown below



- The red indicator light on the device will blink while charging and the screen will show a green battery with a red lightning bolt

HELPFUL TIP: Charging takes 3 hours using this method

 
HOW TO POWER THE DEVICE ON AND OFF

1. Press and hold the Power Button for 3 seconds

- The screen will initialize



- The screen will go to the main menu

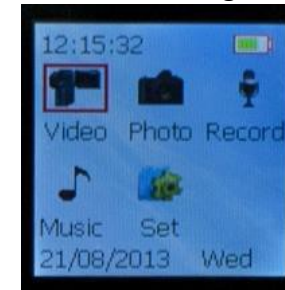

2. Press and hold the Power Button for 3 seconds

 
- The screen will power down



HELPFUL TIP: The recorder will turn itself off if left idle for 2 minutes. You can change this in the "How to Change Power Idle Time" section.

HOW TO USE VIDEO MODE

1. Use the Previous and Next button to select the Video icon on the screen (a red box appears around the selected icon)
2. Press the OK button
3. The following **video mode** screen will appear

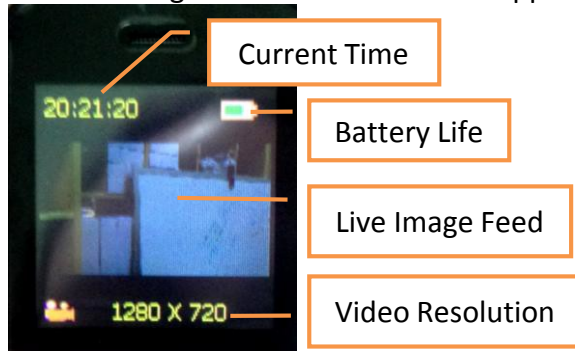

How to Adjust the Brightness

1. Press the Volume Up and Volume Down buttons

How to Change the Video Resolution

 
1. Press the Menu button
2. Press the Previous or Next buttons to select "Video Size"
3. Press the OK button
4. Press the Previous or Next buttons to select HD or VGA
5. Press the OK button
6. Press the Back button

How to Turn the Time Stamp On or Off

1. Press the Menu button
2. Press the Previous or Next buttons to select "REC TimeStamp"
3. Press the OK button to select "On" or "Off"
4. Press the Back Button

How to Record Video

1. Press the Video Record button or simply tap the screen to start recording
2. The following screen will appear

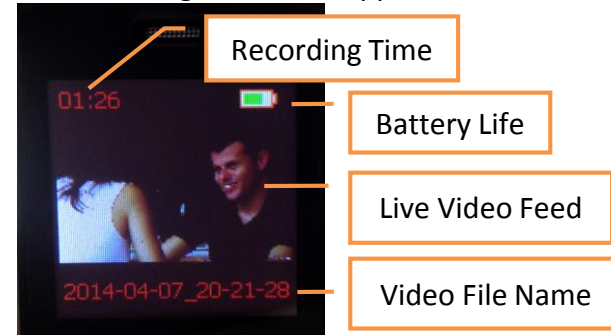

3. Press the Video Record button or simply tap the screen to stop recording

 
HELPFUL TIP: The device automatically saves and starts a new video every 30 minutes

How to Play Video

1. Ensure you are in the **video mode** screen
2. Press the OK button
 - A list of recorded video file names will appear
3. Press the Next or Previous button to browse the list
4. Press the Play button to play the desired video
 - Press the Play button again to pause the video
 - Press and hold the Fast Forward or Rewind to perform these functions
 - Press the Previous or Next buttons to switch videos
 - Press the Back button to return to the video list
5. To delete a video, select the desired video file and press the Menu button
6. Press the Previous or Next buttons to select the desired delete option
7. Press the OK button
8. Press the Previous or Next buttons to select "Yes" or "No"
9. Press the OK button

HOW TO USE PHOTOGRAPHY MODE

1. Use the Previous and Next button to select the Photo icon on the screen (a red box appears around the selected icon)
2. Press the OK button
3. The following **photo mode** screen will appear

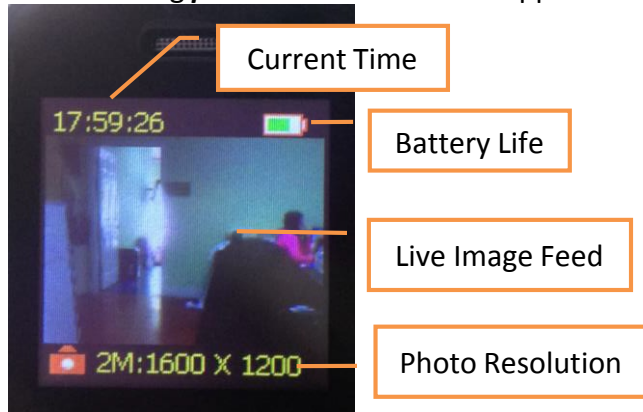

How to Adjust the Brightness

1. Press the Volume Up and Volume Down buttons

How to Change the Photo Resolution

1. Press the Menu button
2. Press the Previous or Next buttons to select "Capture Size"
3. Press the OK button
4. Press the Previous or Next buttons to select 2M, 5M, or 8M
5. Press the OK button
6. Press the Back button

How to Turn the Time Stamp On or Off

1. Press the Menu button
2. Press the Previous or Next buttons to select "Capture TimeStamp"
3. Press the OK button to select "On" or "Off"
4. Press the Previous or Next buttons to select "HD" or "VGA"
5. Press the OK button
6. Press the Back Button

How to Turn the Sound On or Off

1. Press the Menu button
2. Press the Previous or Next buttons to select "Capture Sound"
3. Press the OK button to select "On" or "Off"
4. Press the Back Button

How to Take a Photo

 
1. Press the Photograph button or simply tap the screen to start recording
 - If the capture sound is on, you will hear a camera shutter sound
 - If the capture sound is off, you will not hear anything

How to View Photos

1. Ensure you are in the **photo mode** screen
2. Press the OK button
 - A list of photo file names will appear
3. Press the Next or Previous button to browse the list
4. Press the OK button to view the desired photo
 - Press the Previous or Next buttons to switch photos
 - Press the Back button to return to the video list
5. To delete a photo, select the desired video file and press the Menu button
6. Press the Previous or Next buttons to select the desired delete option
7. Press the OK button
8. Press the Previous or Next buttons to select "Yes" or "No"
9. Press the OK button

HOW TO USE VOICE RECORD MODE

1. Use the Previous and Next button to select the Record icon on the screen (a red box appears around the selected icon)
2. Press the OK button
3. The following **record mode** screen will appear

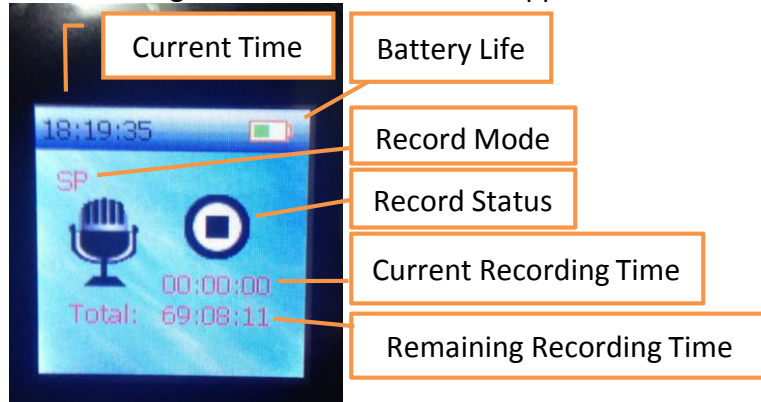

How to Change the Record Quality

1. Press the Menu button
2. Press the Previous or Next buttons to select "Record Quality"
3. Press the OK button
4. Press the Previous or Next buttons to select LP, SP, or HP
5. Press the OK button
6. Press the Back button

How to Change the Voice Activation Level

1. Press the Menu button
2. Press the Previous or Next buttons to select "Voice Set"
3. Press the OK button
4. Press the Previous or Next buttons to select the desired decibel level
5. Press the OK button
6. Press the Back Button

How to Record Audio

1. Press the Audio Record button to start and stop recording

HELPFUL TIP: The recorder will automatically save and start a new sound file every 4 hours

How to Play a Recording

1. Ensure you are in the **record mode** screen
2. Press the OK button
 - A list of recording file names will appear
3. Press the Next or Previous button to browse the list
4. Press the OK button to listen to the desired recording
 - Press the Play button again to pause the recording
 - Press and hold the Fast Forward or Rewind to perform these functions
 - Press the Previous or Next buttons to switch recordings
 - Press the Back button to return to the recording list
5. To delete a recording, select the desired audio file and press the Menu button
6. Press the Previous or Next buttons to select the desired delete option
7. Press the OK button
8. Press the Previous or Next buttons to select "Yes" or "No"
9. Press the OK button

HOW TO CHANGE THE SETTINGS

1. Use the Previous and Next button to select the Record icon on the screen (a red box appears around the selected icon)
2. Press the OK button
3. You will see a list of settings options

How to Change Languages

1. Press the Previous or Next buttons to select "Language"
2. Press OK
3. Press the Previous or Next buttons to select your desired language
4. Press OK

How to Change the Time and Date

1. Press the Previous or Next buttons to select “Time Settings”
2. Press OK
3. Press the Previous or Next buttons to select the day, month, or year
4. Press the Volume Up or Down buttons to change the day, month or year
5. Press the Previous or Next buttons to select the hour, minute, or seconds (military)
6. Press the Volume Up or Down buttons to change the hour, minute or seconds
7. Press OK

How to Change Storage Directory

1. Press the Previous or Next buttons to select “Storage Dir”
2. Press OK
3. Press the Previous or Next buttons to select your desired storage type
4. Press OK

How to Change the Power Idle Time

1. Press the Previous or Next buttons to select “PowerOffSet”
2. Press OK
3. Press the Previous or Next buttons to select how long you want the recorder to wait until it powers itself down
4. Press OK

How to Change the Backlight Timer

1. Press the Previous or Next buttons to select “BacklightTimer”
2. Press OK
3. Press the Previous or Next buttons to select you want the backlight to stay on
4. Press OK

TROUBLESHOOTING

THE DEVICE WON'T TURN ON

- Charge the device for at least 4 hours before the first use
- Make sure the charging cable is securely inserted into the device and into the power source

THE DEVICE ISN'T CHARGING

- Replace the battery or charging cable
- If you are charging via a wall power source, you may need to charge via your PC. The AC adapter might be bad.

THE DEVICE HAS CRASHED

- You need to reset the device

MY COMPUTER DOESN'T RECOGNIZE THE DEVICE

- Unplug the device from your PC and reboot the device
- Unplug the device from your PC and reboot your PC
- Try using a different USB slot on your PC
- Replace the USB cable

THE SOUND OR VIDEO IS UNCLEAR

- The device needs charging

OTHER PROBLEMS

- Call our technical support at **770-694-6923**

SPECIFICATIONS

Video Resolution	1280*720
Video Format	AVI
Frames per Second	30
Recording Time	Video: up to 3 hours Audio: up to 15 hours
Motion Detection	No
Photo Resolution	3264*2448
Photo Format	JPEG
Audio Format	WAV
Voice Activation	Yes
Water Resistant	No
Battery Life	Video: up to 3 hours Audio: up to 15 hours
Type of Memory	Internal 8GB Up to 32GB MicroSD card expansion
Recording Capacity	Video: 2.5GB every 30 minutes Audio: 138 hours
USB Interface	2.0 USB
Player Software	VLC recommended
Operating Systems	Windows 2000 — Windows 8 Mac OSX Linux