

MINI CLOCK CAMERA



THANK YOU FOR PURCHASING THE MINI CLOCK CAMERA

Please read this manual before operating the mini clock camera and keep it handy.

Our line of Mini Clock Cams hide a high resolution color DVR and microphone in an innocent looking portable alarm clock. This Mini Clock Camera is the original design of our customer favorite. It's easy enough to use for a novice and is a reliable and economical choice for use as a nanny cam or to monitor your room while you're away.

This original model records 1280*960 resolution color video. When charged fully, this camera lasts up to 10 hours. The remote allows you to choose between motion detection, video recording, and taking still photos. The maximum memory allotted is a 32GB MicroSD card.

Your purchase should include:

- 1 x Mini Clock Camera
 - 1 x Remote Control
 - 1 x USB Cable
 - 1 x AC Adapter with Cable
 - 1 x Software Disk
 - 1 x Instruction Booklet
-

GET FAMILIAR WITH YOUR MINI CLOCK CAMERA

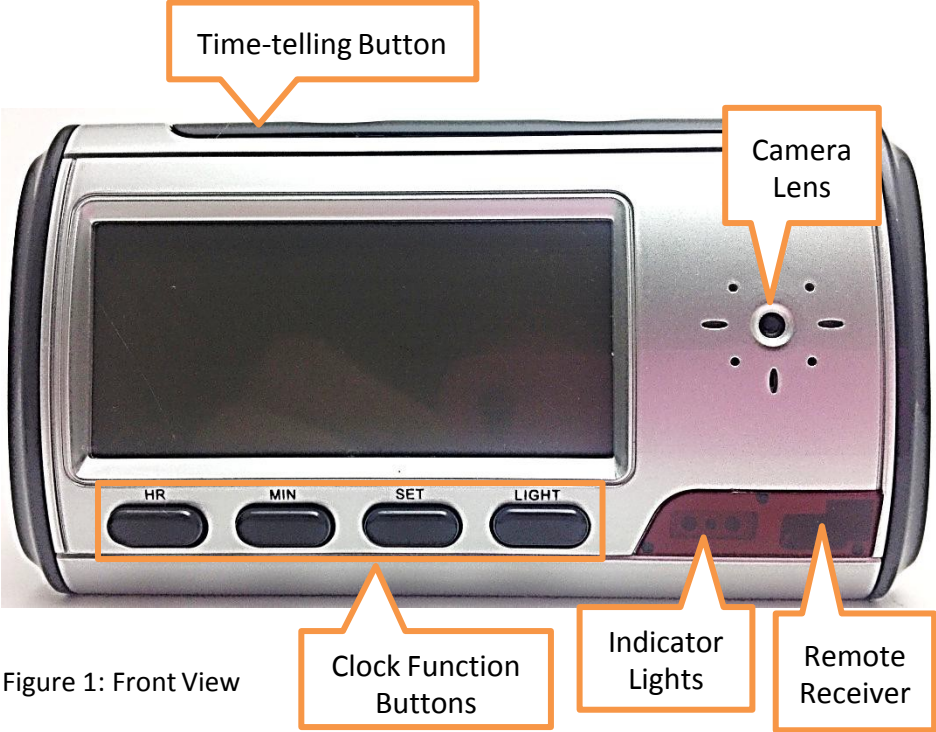 


Figure 1: Front View

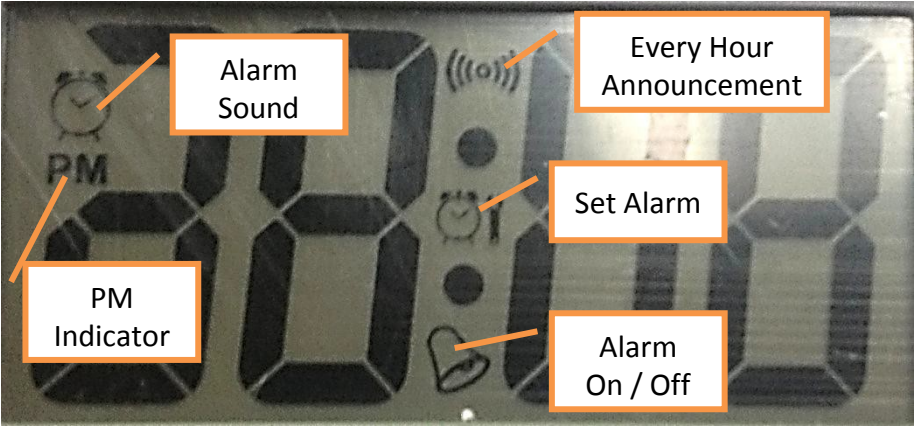 


Figure 2: LCD Screen

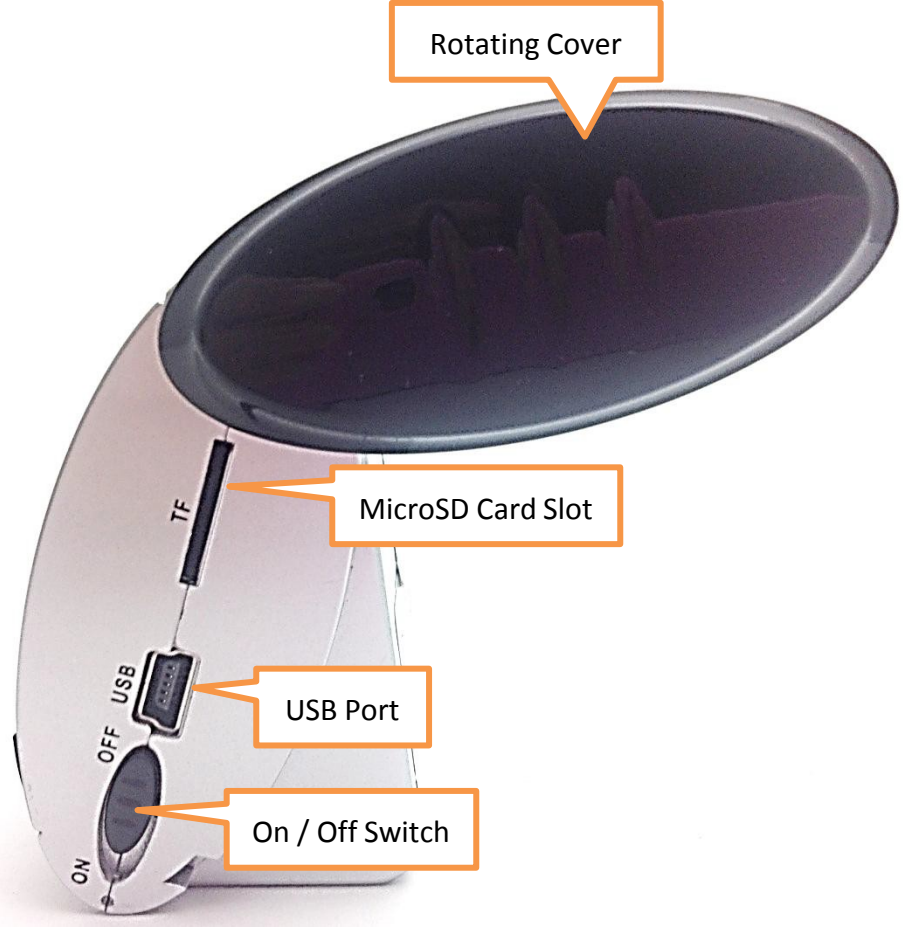 


Figure 3: Side View

OPERATING THE MINI CLOCK CAMERA

IMPORTANT NOTICE: Allow the device to charge 4 – 6 hours before using.

IMPORTANT NOTICE: Before using the mini clock camera, you will need to remove the plastic tab from the remote and from the battery compartment in the back of the clock. It is safe to disregard the "DON'T OPEN IT!!" label.

HOW TO CHARGE THE MINI CLOCK CAMERA

1. Plug the USB cable into your PC
2. Plug the USB cable into the clock
 - The red indicator light will be on while charging

HOW TO SET THE TIME AND DATE

You can set the time and an alarm on this model.

Four buttons that you need for setting up the mini clock camera are located beneath the LCD screen (see Figure 2):

- HR (Hour)
- MIN (Minutes)
- SET
- LIGHT

Set the Time

1. Push the SET button
 - Both the hour and the minutes will be flashing
2. Push the HR button to set the hour

3. Push the MIN button to set the minutes

Set the Alarm

1. Push the SET button two times
 - The Set Alarm icon will be on
 - Both the hour and minutes will be flashing
2. Push the HR and MIN buttons to set the time when the alarm should sound

Set Voice Notifications

1. Push the SET button three times
 - The Every Hour Announcement, Alarm Sound, and Alarm On / Off icon will be flashing
2. Push the MIN button to turn the alarm on or off
3. Push the HR button to switch between the alarm going off just on the time you set, or for the clock to announce the hour every hour

Turn On the Light

1. Push the LIGHT button
 - The blue background light will come on for about 8 seconds before automatically turning off

PREPARING THE DEVICE FOR USE

1. Be sure the On / Off Switch located under the rotating panel is set to ON
2. Insert a MicroSD card into the slot located under the rotating panel

3. Make sure the mini clock camera has been fully charge
4. Place the device where you want to record

USING THE REMOTE



Power Button



Motion Detection Button



Video Button



Camera Button

HOW TO TURN ON THE CAMERA

1. Push the Power Button on the remote
 - The blue indicator light will come on

HOW TO RECORD VIDEO

1. Push the Video Button on the remote
 - The blue indicator light will blink 3 times and then turn off
 - The device is now recording
2. Push the Video Button on the remote
 - The blue indicator light will turn on
 - The device has stopped recording and saved the video

HOW TO TAKE PHOTOS

1. Push the camera button
 - The blue light will flash once
 - The device has taken a photo

HOW TO USE MOTION DETECTION

1. Push the Motion Detection Button on the remote
 - The blue light will flash rapidly until motion is detected
 - When motion is detected, the blue light will flash slowly and then turn off
 - The device is now recording video

 
- The device will record for 3 minutes before cycling over to a new video
- If no motion is detected, the device will stop recording

2. Push the Motion Detection Button on the remote

- The blue indicator light will turn on
- The device has stopped recording and saved the video

HOW TO RESET THE TIME AND DATE STAMP

1. Connect the device to your PC using the USB Cable
2. Turn on the device using the Power button on the remote
3. Go to <http://www.mgidownloads.com/>
4. Click on "WriteTime.exe"
5. Click "Save File"

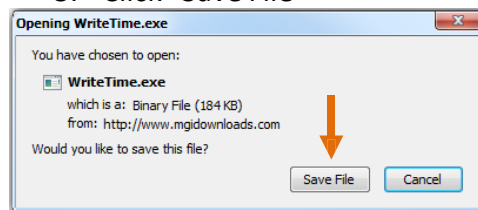

IMPORTANT NOTICE: You might receive a warning that this program contains a virus. Disregard this warning. The program is safe to use.

6. Go to Start > Computer > Downloads > Open WriteTime.exe

 


7. Click "Run"



8. The program will automatically detect the device.

9. Click "Update"

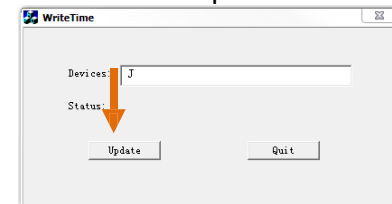


RETRIEVE THE FILES TO YOUR PC

1. Plug the device into your PC using the USB cable.
2. Make sure the On / Off Switch is in the ON position.
3. Push the Power Button on the remote.
 - The blue light will come on
4. Locate "Removable Disk" inside the (My) Computer folder.
 - AutoPlay Removable Disk > Open folder to view files



Or...

 - Go to Start > Computer > Removable Disk

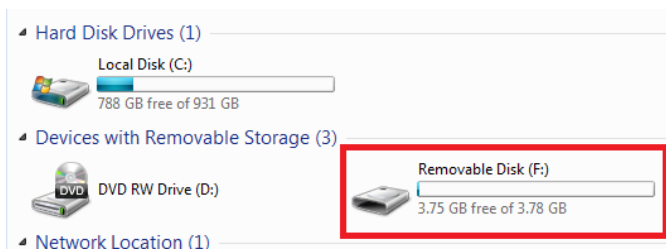

5. Open the Removable Disk drive.
6. Open the DCIM folder.
7. Open the 100DSCIM folder.
8. Double click the file you want to view.
 - VLC Player is recommended for watching videos.

TROUBLESHOOTING

THE DEVICE WON'T TURN ON

- Charge the device for at least 4 hours before the first use.
- Make sure the charging cable is securely inserted into the device and into the power source.

THE DEVICE ISN'T CHARGING

- Replace the battery or charging cable.
- If you are charging via a wall power source, you may need to charge via your PC. The A/C adapter might be bad.

THE DEVICE HAS CRASHED

- You need to reset the device.
 - Simply take out the battery and put it back in.

MY COMPUTER DOESN'T RECOGNIZE THE DEVICE

- Unplug the device from your PC and reboot the device.
- Unplug the device from your PC and reboot your PC.
- Try using a different USB slot on your PC.
- Replace the USB cable.

THE SOUND OR VIDEO IS UNCLEAR

- The device needs charging.

THE BLUE LIGHT IS FLASHING CONSTANTLY

- The battery is low.

OTHER PROBLEMS

- Call our technical support at **770-694-6921**

SPECIFICATIONS

Pixels	2 Megapixels
Video Resolution	1280*960
Video Format	AVI
Frames per Second	28
Recording Time	12 hours
Vision Angle	72°
Motion Detection	Yes
Photo Resolution	1600*1200
Photo Format	JPEG
Lux Rating	1 LUX
Water Resistant	No
Battery Life	12 hours
Type of Memory	MicroSD Card
Memory Capacity	32GB
USB Interface	2.0 USB
Player Software	VLC is recommended
Operating Systems	Windows 2000 Windows XP Windows Vista32 Windows 7 Max OSX