

VR Clip 8GB



THANK YOU FOR PURCHASING THE VRCLIP8GB

Please read this manual before operating the VRCLIP8GB, and keep it handy.

The VRCLIP8GB is a device that allows you to take discrete audio recordings. It offers the option of taking either a “long time recording” with a rate of 128Kbps or a “super high fidelity” recording with a rate of 192Kbps. The device comes equipped with a set of earphones, which allow you to hear a playback of the recording immediately.

Other features include:

- The ability to set the time for the device so the time of each recording can be taken.


- Automatic saving of recorded files
- The ability to back up files on your computer using the accompanying USB cord

Your purchase should include:

- 1 X Microphone
- 1 X USB cord
- 1 X Earphones

GET FAMILIAR WITH YOUR VRCLIP8GB



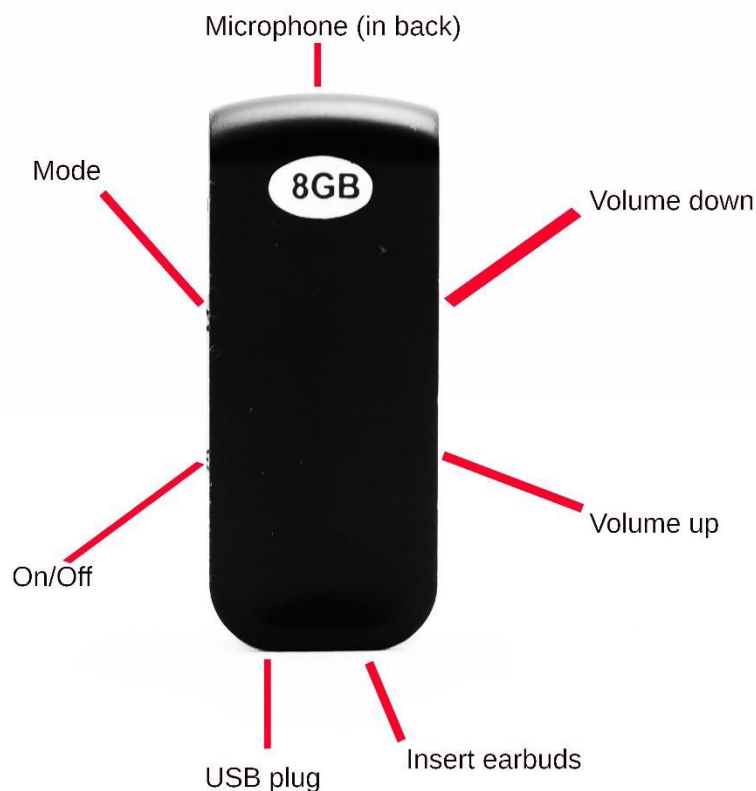

OPERATING THE VRCLIP8GB

PRECAUTIONS TO TAKE

1. Do not handle the recorder in high temperatures or in damp or dusty areas.
2. Be sure to regularly back up files onto your computer.

HOW TO TURN THE DEVICE ON AND OFF

1. Press the “On/Off” button and hold it for at least 2 seconds.
2. The indicator light will turn red when the device is on.
3. To turn the device off, repress the “On/Off” button and hold it for at least 2 seconds. The light, as well as the device, will go off.

HOW TO TAKE A RECORDING

1. Be sure that the earphones are not plugged in.
2. The recorder will begin recording shortly after it is turned on.
3. Initially, the indicator light will be a solid red, but once it starts recording, it will turn blue and blink. It will blink for the duration of the recording unless you turn it off.
4. To turn the indicator light off during recording, press and hold (for at least 5 seconds) the “Volume down” button. The blue blinking light will then stop. To turn it back on, repress and hold (again for at least 5 seconds) the “Volume down” button.
 - Please note: When the device is powered on or off, the blue light will reappear for a moment.
5. Every two hours of recordings will be automatically saved to separate files.

HOW TO CHANGE MODE

1. Press the “Mode” button to shift from “long time recording” mode to “super high fidelity recording” mode.
2. The blue light will blink at a different speed depending upon the mode the device is in.
 - In “super high fidelity recording” mode, the light will blink quickly.

- In “long time recording” mode, the light will blink slowly.
3. The default mode when the device is turned on is the “long time recording” mode.

HOW TO OPERATE THE PLAYBACK

1. When you plug the earphones in, the recorded files will automatically begin playing, and the blue light will continuously be on.
2. To adjust the volume, quickly press the “volume up” or “volume down” buttons.
3. To rewind or fast forward, press and hold the “volume up” or “volume down” buttons.
4. To pause, quickly press and release the “On/Off” button.
 - To switch between files while the device is paused, quickly press the “volume up” or “volume down” buttons. The next file will begin playing automatically.

HOW TO SET THE TIME

1. Connect the recorder to your computer via the accompanying USB cord (see “Retrieve the Files to Your PC” below).
2. Inside of the “Removable Disk” folder, you should see a folder labeled “SetUDiskTime.” Double left click on this folder.
3. Inside of this folder, you should see a program labeled “SetUdisktime (9X).exe” Double left click on this program. A small screen should appear letting you know that the device’s time is now synced.

HOW TO CHARGE THE DEVICE

1. Insert the USB cord into the USB plug on the device, and connect the other end of the USB cord to your computer.
2. Leave the device plugged in for at least 4-6 hours in order for it to fully charge.
3. While charging, the red light will blink; when the device is fully charged, the light will be a steady red.


RETRIEVE THE FILES TO YOUR PC

1. Plug the device into your PC using the USB cable
2. Locate “Removable Disk” inside the (My) Computer folder



Or...

- Go to Start > Computer > Removable Disk

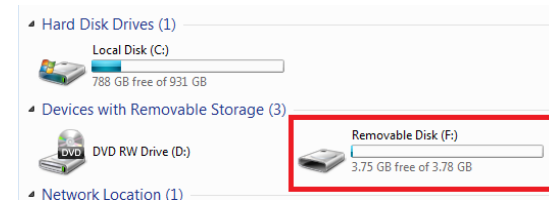

3. Open the Removable Disk drive
6. Open the VIDEO folder for general/video recordings or the MOTION folder for motion recordings.
7. Double click the file you want to play.

TROUBLESHOOTING

IF THE MEMORY IS FULL

1. When the memory is full, the blue light will blink for about 5 seconds and then the recorder will stop recording.
2. Connect the device to your computer (see “Retrieve Files” above) and then either move files to your computer or delete some of the files to free up more space.

IF THE BATTERY NEEDS CHARGING

1. If the red light begins to blink while recording, then the battery needs to be charged.
2. Please see “How to Charge the Device” above.

Call our technical support at **770-694-6923**

SPECIFICATIONS

Size	76*24*11 mm
Weight	About 15 g
Polymer Battery	3.7V, about 100mAh
Storage Capacity	8 GB
Recording Format	WAV, 128 Kbps/ 192Kbps
Recording Time	128Kbps: about 140hrs. 1536Kbps: about 12hrs.
Support System	Windows2000/XP/8/Android